

#03: Signal Processing

Claudio CASTELLINI, Sabine THÜRAUF


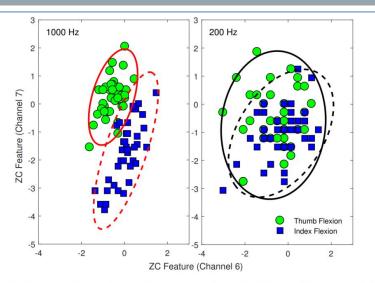


Figure 2. Differences in EMG patterns between using: (**left**) a 1000 Hz sampling rate; and (**right**) a 200 Hz sampling rate. ZC features are extracted from two different EMG channels (6 and 7) during thumb flexion (green circle markers and solid lines) and index flexion (blue square markers and dashed lines). Samples are from Subject 1 of Database 3.

EMG patterns related to two actions. Reproduced from Angkoon Phinyomark, Rami N. Khushaba and Erik Scheme, *Feature Extraction and Selection for Myoelectric Control Based on Wearable EMG Sensors*, MDPI Sensors 2018, 18, 1615 The rubber hand illusion. See Botvinick M, Cohen J., Rubber hands 'feel' touch that eyes see. Nature. 1998 Feb 19;391(6669):756. doi: 10.1038/35784. PMID: 9486643.





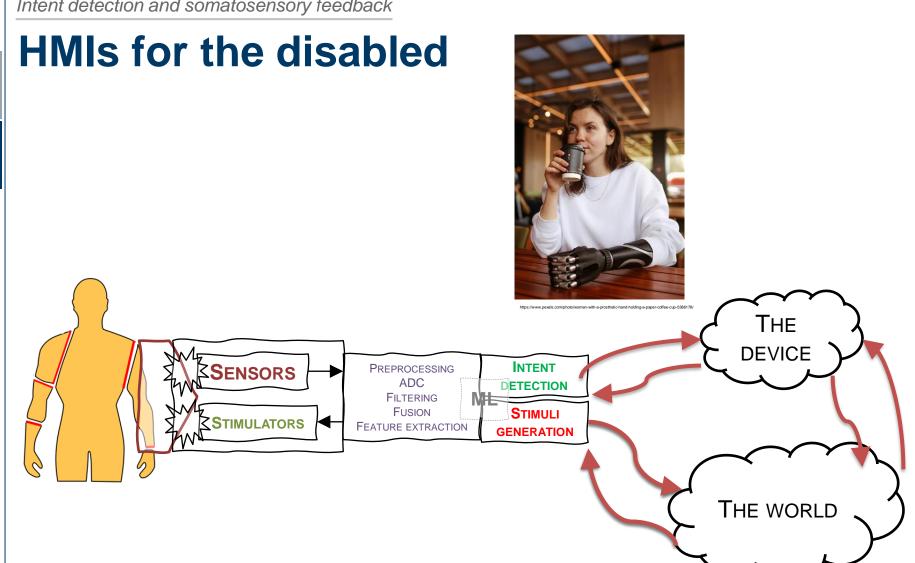




Where to measure


Example for following Exercises

A scientist plans to recorded sEMG signals of wrist motions like pronation, supination, flexion, extension, etc..

Questions:

Where would you place the sEMG sensors? What would be a desired measurement rate?

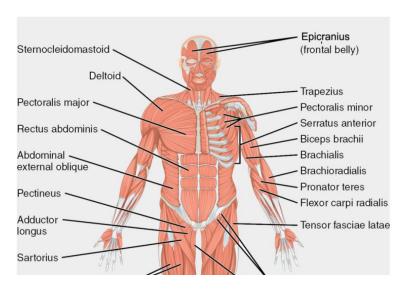

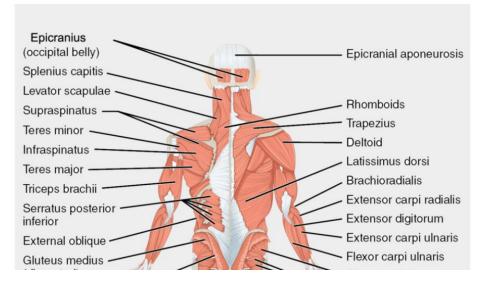

https://courses.lumenlearning.com/ap1x94x1



Transmission

Example for following Exercises

A scientist plans to recorded sEMG signals from a participant's forearm in order to train a machine learning method for prosthesis control. For the data acquisition a Myo Armband (Thalmic Labs) with 8 channels around the forearm was used. Transmission of sEMG is planned to be wireless through Bluetooth 4.0. During the experiment data will be gathered for 5 seconds for the movements *Flexion*, *Extension* and *Rest*.

Further info:

Sampling frequency: 200 Hz

Channels: 8 Range: 1...256

Bluetooth 4.0 data throughput: 0.305 Mbit/s

Questions:

- 1, Is the Bluetooth connection sufficient for data transmission? Explain.
- 2, In a second experiment the scientist plans to use high-density sEMG with 128 channels, a 16-bit resolution and a sampling frequency of 2 kHz. Does the scientist need to find another way of data transmission?
- 3, During the experiment all data is queued up for 15s in a 2D array. How much temporary storage is needed in each scenario?
- 4, How does it differ if you send the data via TCP/IP or via UDP?
- 5, What would be a suitable alternative for Bluetooth?

Eigenvalues & Eigenvectors

Questions

After the data acquisition the scientist rectifies the data and afterwards runs it through a lowpass Butterworth filter. Later that day the scientist would like to get a first impression how differentiable the single movements are. The scientist decides to start with a PCA to visually inspect the data.

Channel 1	Channel 2	Channel 3	Channel 4	Channel 5	Channel 6	Channel 7	Channel 8
0,0366	0,0220	0,0185	0,0331	0,0255	0,1047	0,0573	0,0842
0,0530	0,0283	0,0223	0,0364	0,0373	0,1456	0,0846	0,1259
0,0722	0,0383	0,0265	0,0417	0,0501	0,1845	0,1176	0,1700
0,0911	0,0492	0,0305	0,0473	0,0612	0,2238	0,1492	0,2115
0,1064	0,0591	0,0335	0,0527	0,0718	0,2559	0,1757	0,2507
0,1191	0,0683	0,0357	0,0568	0,0801	0,2823	0,2046	0,2927
0,1288	0,0758	0,0373	0,0606	0,0849	0,2993	0,2383	0,3338
0,1361	0,0817	0,0386	0,0648	0,0900	0,3099	0,2736	0,3699
0,1406	0,0869	0,0398	0,0678	0,0959	0,3192	0,3062	0,4039
0,1424	0,0902	0,0403	0,0698	0,1011	0,3231	0,3318	0,4278

Provide the formula for standardization and covariance matrix calculation, then simplify. Afterwards, calculate both exemplarily on 10 data points of 2 sEMG channels lying on flexor (channel 4) and extensor (channel 8) muscles.

$$_{4}\overline{x} = 0.0531$$
 $_{4}\sigma = 0.0131$; $_{8}\overline{x} = 0.2670$ $_{8}\sigma = 0.1185$

Info: Following data was subsampled after filtering, leaving 12,5% of the original data i.e. 10 data points = 0.8 s



Sensor Fusion

Questions

Imagine you acquired data with EMG and IMUs during an experiment.

- 1. What issues might occur during sensor fusion?
- 2. How could you handle different sampling rates?
- 3. How could you handle differences of the timestamps?
- 4. How could you handle missing pieces of data?







ps://mindrove.com/product/armband_8_ch/